


Update Firmware and custom settings

The driver for the STM32 bootloader has been updated. The old instructions does not work anymore.

The process for updating either firmware or custom settings are the same.

Set the jumper on the Ultrapitch mod to USB and power cycle the turntable.
Connect the USB cable to your computer.

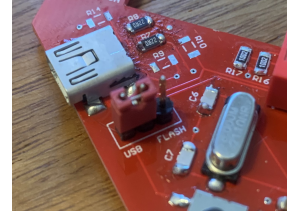


Download STM32CubeProgrammer

<https://www.st.com/en/development-tools/stm32cubeprog.html>



1. Select USB, refresh port and press connect
2. Press the "+" and add the file (Firmware or settings file you want to use, ".hex" or ".s19")
3. Press Download

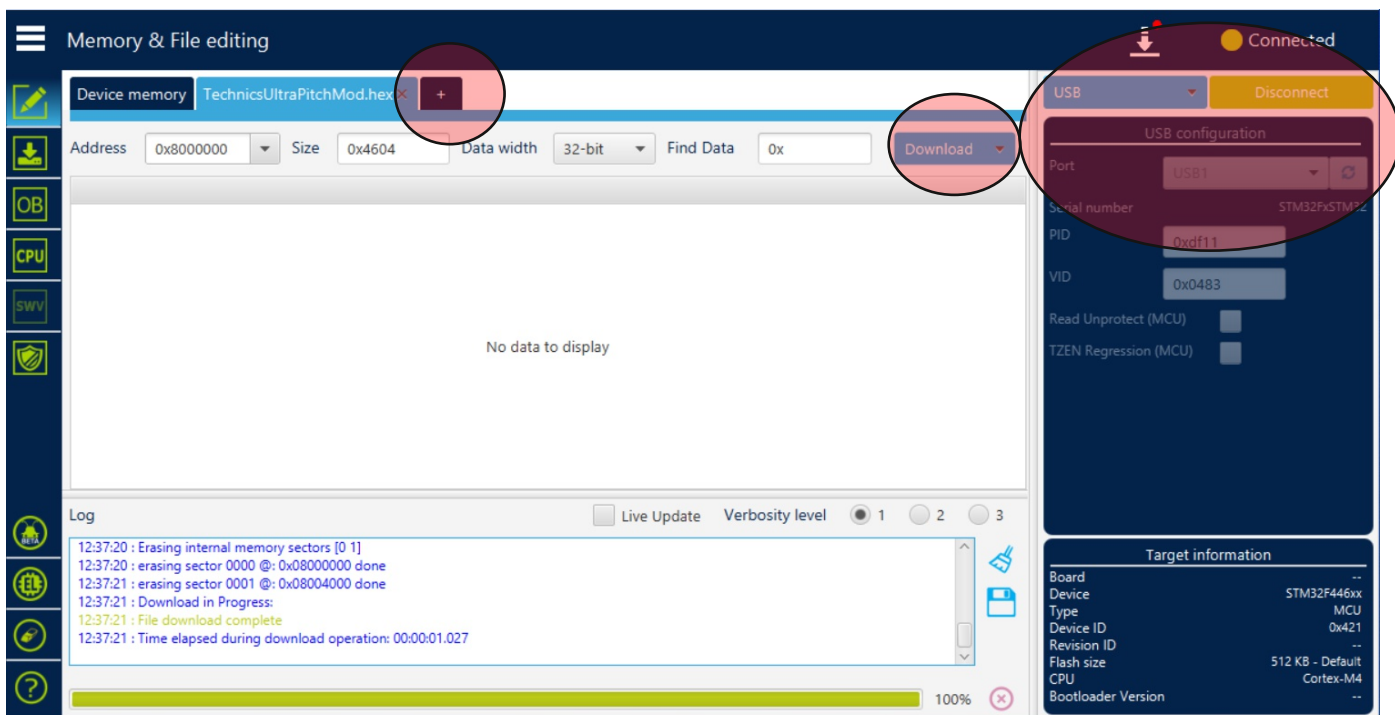

Put the jumper back to "FLASH" on the mod PCB and power cycle the turntable.

DONE

Making a factory reset of the mod will remove custom settings